COMPONENT COVERAGE GUIDE

NISSAN®

Enjoy peace of mind with superior benefits and protection

NISSAN®

Security+Plus®

Security+Plus®

Protect Your Investment

The price for parts and labor to repair many major vehicle components can be significant. One repair bill after your factory warranty expires can easily exceed the cost of your Nissan-backed Security+Plus Extended Protection Plan. It's clear that our coverage plan can quickly pay for itself!

Service You Can Trust with superior parts and service designed exclusively for your vehicle

- **Genuine Nissan Parts**[1] specifically engineered for Nissan vehicles to maximize performance and reliability
- **Advanced Diagnostics** equipment designed for Nissan keeps your vehicle running at its best
- **Factory-trained Technicians** ensure the best service possible
- **Nationwide Repairs** at any authorized Nissan dealership

[1] Replacement of any part will be made with a new or remanufactured Genuine Nissan or Nissan-approved replacement part in use at the time of repair. The replacement part may differ from the original part.
[2] Should you have a mechanical breakdown of a covered component

24-Hour Emergency Roadside Assistance

- **"Sign and Drive" Service** up to $100 per claim with no deductibles for the services shown to the right or for dispatch towing service

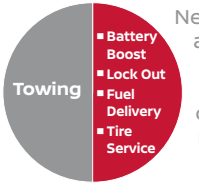

Nearly 50% of all Roadside Assistance calls are due to non-mechanical issues.

Trip Interruption

- **Reimbursement** up to $500 for alternate transportation, meals and lodging when you are 100 miles or more from home[2]

Car Rental Assistance

- **Reimbursement** for actual expenses of substitute transportation up to $42/day, to a maximum of five (5) days, and $210 per breakdown[2]

Towing

- **Reimbursement** for towing to the nearest authorized Nissan dealer up to $100 per claim[2]

Customer Assistance

- **Throughout the United States** at any Nissan dealer or by calling 800-NISSAN-1

Security+Plus®

Want Maximum Protection? Choose Gold Preferred — 98% of Security+Plus customers do!

Gold Preferred coverage delivers the ultimate peace-of-mind protection for your new or pre-owned Nissan.

The CPO/Certified Select Wrap upgrade offers the same coverage as Gold Preferred, too.

Unparalleled value from your Nissan dealer

owners.nissanusa.com/Security+Plus

Component Coverage

VEHICLE SYSTEMS	Gold Pref & Wrap	Silver Pref	Power-train Pref	CPO/ Certified Select LW
	Totals May Vary by Model & Year			
Engine	424	315	255	164
Transmission/Transfer Case	446	378	349	342
Drive Axle (FWD/RWD/AWD)	110	104	102	98
Hybrid/Electric Vehicle	72	55	28	27
Brakes	111	59	21	0
Electrical	300	244	23	0
Fuel System	86	54	33	0
Steering	99	70	50	0
Suspension	123	70	66	0
Air Conditioning/Heater	129	83	20	0
Body & Interior	284	101	0	0
Advanced Driver Assistance Systems	49	30	0	0
Infotainment	66	65	0	0
TOTAL	**2,290+**	**1,620+**	**940+**	**630+**

ADVANCED DRIVER ASSISTANCE SYSTEMS

		GOLD Pref & Wrap	SILVER Pref	POWERTRAIN Pref CPO/Certified Select
CONTROL ASSY-INTELLIGENT CRUISE CONTROL	18995	■	■	
DISTANCE WARNING SNSR SW	25125	■	■	
SWITCH ASSY - BSW	25126	■	■	
ICC BRAKE HOLD RELAY	25184	■	■	
ICC STEERING SWITCH	25185	■	■	
ICC BRAKE SWITCH	25186	■	■	
SWITCH-STEERING WHEEL,PRO PILOT	25550	■	■	
FRNT SONAR SENSOR BUZZER	25659	■	■	
BUZZER-SONAR SENSOR	25660	■	■	
SONAR ROAD SENSOR	25965	■	■	
SWITCH-SENSOR OFF,PARKING(SONAR)	25988	■	■	
SONAR SWITCH ASSY	25989	■	■	
FRONT SONAR SENSOR	25993	■	■	
FRONT CORNER SONAR SENSOR	25994	■	■	
REAR SONAR SENSOR NS	25996	■	■	
SENSOR-SONAR,FRONT SIDE	25998	■	■	
SENSOR-SONAR,REAR SIDE	25999	■	■	
BUZZER ASSY-LKS / LDW	26349	■	■	
WARNING CHIME/BUZZER	26350	■		
ICC WARNING CHIME	26353	■		
BSW/BSI INDICATOR	26670	■	■	
CONTROL ASSY-BACK VIEW	28262	■	■	
CONT ASSY CAMERA	28416	■		
CAMERA ASSY-SIDE VIEW	28419	■		
VEHICLE DATA TRANSMITTER ASY	28420	■	■	
CONTROL UNIT- ADAS2	28424	■		
ADAS CONTROLLER	28427	■		
BSW CONTROL ASSY	28428	■	■	
CONTROL MODULE - BUZZER,DRIVER ASSISTANT	28429	■	■	
SIDE OBSTACLE WARNING SENSOR	28430	■	■	
SENSOR UNIT-INTRUDE	28436	■	■	
SENSOR ASSY - DISTANCE , ICC	28437	■	■	
REAR DISTANCE SENSOR	28438	■	■	
CAMERA ASSY-BACK VIEW	28442	■		
CAMERA ASSY - LKS / LDW	28443	■		
CAMERA ASSY-MIRROR,SMART ROOM	28445	■		
REAR SONAR SENSOR BRACKET	28452	■		
CONTROL MODULE BSW	28456	■		
CAMERA ASSY-FR VIEW	28461	■		
CONTROL VIEW CONTROL ASSY	28462	■		
SOLENOID VALVE ASSY-BACK VIEW CAMERA	28479	■		
CONTROL ASSY-CAN GATEWAY	28481	■	■	
SOLENOID VALVE ASSY - BACK VIEW CAMERA	28499	■		
CONTROL UNIT-SONAR SENSOR	28532	■	■	
TUBE ASSY - WASHER,REAR VIEW CAMERA	28975	■		
CAMERA CONTROLLER	284A1	■		
LANE KEEP CAMERA	284G2	■		
SIDE OBSTACLE WARNING SENSOR ASSY	284K0	■	■	
REAR VIEW CAMERA KT	AA158	■		

AIR CONDITIONER/HEATER

		GOLD Pref & Wrap	SILVER Pref	POWERTRAIN Pref CPO/Certified Select
COMPRESSOR BOLT	11910	■		
RESERVOIR TANK HEATER	21710	■		
RESERVOIR TANK CAP HEATER	21712	■		
TEMPERATURE SENSOR	22636	■	■	■
REAR HEATER CONTROL	25207	■	■	
BLOWER MOTOR RELAY	25208	■	■	
HEATER RELAY	25214	■	■	
A/C RELAY	25218	■	■	
FAN MOTOR RELAY	25246	■	■	
MAX COLD DOOR RELAY	25257	■	■	
REAR HEATER RELAY	25274	■	■	
RELAY - AFS	25295	■	■	
CONTROL-REAR HEATER, FRONT	25307	■	■	
HEATER UNIT	27000	■		
REAR HEATER CORE	27013	■	■	
REAR HEATER MOTOR	27014	■	■	
HEATER & A/C CONTROL	27030	■	■	
VACUUM SELECTOR VALVE	27031	■	■	
ATC CONTROL	27032	■	■	
REAR HEATER	27035	■		
A/C HARNESS	27038	■	■	■
A/C SWITCH	27041	■	■	
BLOWER CASE/HOUSING	27065	■		
BLOWER MOTOR & FAN	27070	■	■	
HEATER CONNECTOR	27071	■		
HEATER SWITCH RESISTOR	27077	■		
VACUUM ACTUATOR	27080	■		
VACUUM TANK	27084	■		
VACUUM WATER COCK	27090	■		
VACUUM CHECK VALVE	27096	■	■	■
HEATER CORE	27115	■	■	
HEATER COCK	27116	■		
CONTROL CABLE	27134	■		
MODE ACTUATOR ASSY	27141	■		
PTC HEATER ASSY	27143	■	■	
PIPE ASSY HEATER	27144	■	■	
BLOWER CONTROL AMPLIFIER	27150	■		
DEFROSTER HOSE	27164	■		
REAR HEATER RESISTOR	27178	■	■	
HEATER HOSE	27181	■	■	
HEATER TUBE	27185	■		
THERMISTOR	27322	■	■	
AMPLIFIER-THERMO CONTROL	27330	■	■	
REAR BLOWER MOTOR	27375	■	■	
FAN IMPELLER	27383	■	■	
REAR COOLING UNIT	27405	■	■	
REAR EVAPORATOR	27410	■	■	■
REAR A/C HIGH TUBE ASSY.	27413	■	■	
REAR A/C LOW TUBE ASSY.	27414	■	■	
CASE ASSEMBLY	27415	■		
REAR COOLING UNIT ASSY	27416	■		
AIR PURIFIER CONTROL	27427	■		
MOTOR ASSY-REFRIGERATOR	27433	■		
AIR PURIFIER COMP	27452	■		
DRAIN HOSE	27619	■		
EVAPORATOR	27621	■	■	■
SWITCH—HIGH PRESSURE	27623	■	■	
EXPANSION VALVE	27625	■	■	■
COMPRESSOR ASSY	27630	■	■	■
RADIATOR FAN CONTROL AMP	27631	■		
ELECTRIC A/C UNIT	27635	■	■	■
RECEIVER DRIER	27640	■	■	■
LOW PRESSURE SWITCH	27648	■	■	
CONDENSOR	27650	■	■	■
CONDENSOR FAN & MOTOR	27651	■		
ASPIRATOR ASSY	27655	■		
SUCTION THROTTLE VALVE	27660	■	■	■
SWITCH—REAR A/C	27665	■	■	
SIDE VENT DUCT	27670	■		
ACCELERATION CUT SWITCH	27671	■	■	
COOLER PIPE	27677	■	■	
O RING SEAL	27680	■	■	■
VACUUM LOCK-OUT SWITCH	27685	■	■	
FLOOR DUCT SENSOR	27700	■	■	
VENTILATOR DUCT SENSOR	27701	■	■	
DEFROSTER NOZZLE SENSOR	27702	■	■	
SUNLOAD SENSOR	27705	■	■	
SENSOR GRILLE	27706	■	■	
AIR PURIFIER SENSOR	27708	■		
SENSOR-PEFRIGERANT TEMP,COMPRESSURE DISCHARGE	27710	■	■	
VACUUM HOSE	27711	■	■	
SENSOR-AIR TEMP,PTH HEATER OUTLET	27712	■	■	
SENSOR-OPTICAL	27715	■	■	
FAN CONTROL AMPLIFIER	27717	■		
INTAKE SENSOR	27723	■	■	
ASPIRATOR	27726	■		
IN-VEHICLE SENSOR	27727	■	■	
DUCT - ASPIRATOR	27728	■		
COMPRESSOR SHAFT SEAL	27730	■	■	■
WATER TEMP SENSOR	27732	■	■	■
BI-LEVEL MOTOR ACTUATOR	27736	■		
FEEDBACK RESISTOR (PBR)	27738	■		
AIR MIX DOOR ACTUATOR	27740	■		
DOUBLE SOLENOID VACUUM VALVE	27741	■	■	■
MAGNETIC CLUTCH	27742	■	■	■
SNAP RING	27744	■	■	■
ACTUATOR - DEFROSTER DOOR	27747	■		
ACTUATOR-DRIVER SIDE, AIR MIX DOOR	27748	■		
ACTUATOR-DRIVER SIDE, INTAKE DOOR	27749	■		
TRANSISTOR-POWER	27750	■		
ASPIRATOR FAN	27752	■		
AMBIENT SENSOR	27755	■	■	
SENSOR-AMBIENT AIR TEMP	27757	■	■	
AUTO TEMP CNTRL UNIT	27762	■	■	
UNIT-CONTROL,HEAT PUMP	27763	■		
SUNLOAD SENSOR AMPLIFIER	27764	■	■	
SHIFT ACTUATOR VALVE	27765	■	■	■
AUTO AIR CONTROL AMPLIFIER	28520	■		
MAGNETIC CLUTCH AMPLIFIER	28525	■	■	
SEAL-CONDENSER SIDE	92184	■	■	■
VALVE—EXPANSION	92200	■	■	■
SUPER HEAT SWITCH	92310	■	■	
THERMAL PROTECTOR	92316	■		
ACCELERATION CUT TIMER	92330	■		
SUPER HEAT TIMER	92331	■		
HOSE ASSY HEATER	92400	■	■	
REAR WASHER TUBE	92401	■	■	
REAR HEATER HOSE	92420	■	■	
REAR HEATER TUBE	92433	■	■	
PIPE ASSY-FR COOLER, HIGH	92441	■		
HEAT EXCHANGER	92446	■		
REAR COOLER PIPE (REAR)	92460	■	■	
REAR COOLER ASSY (FRONT)	92462	■	■	
REAR HIGH/LOW COOLER PIPE	92471	■		
LOW PRESSURE FLEXIBLE HOSE	92480	■	■	
HIGH PRESSURE FLEXIBLE HOSE	92490	■	■	
HEATER PUMP ASSY	92516	■	■	
COMPRESSOR RPM SENSOR	92855	■	■	
G-SENSOR ASSY NS	98805	■	■	

BODY & INTERIOR

		GOLD Pref & Wrap	SILVER Pref	POWERTRAIN Pref CPO/Certified Select
LOCK-LID,CHARGE PORT	23600	■		
BACK DOOR LOCK ACTUATOR	25189	■		
SUN ROOF SLIDE SWITCH	25191	■	■	
SUN ROOF RELAY	25192	■	■	
MIRROR HEAT RELAY	25200	■	■	
RELAY, STORAGE OPENER	25209	■	■	
RELAY, STORAGE OPEN CANCEL	25211	■	■	
RELAY, TOP STK RR LOCK OPENER	25212	■	■	
RELAY, TOP INTERLOCK	25213	■	■	
RELAY, TRUNK LID OPENER	25221	■	■	
RELAY, TRUNK LID OPEN CANCEL	25222	■	■	
BODY SONIC RELAY	25248	■		
FUEL LID OPENER RELAY	25271	■	■	
SWITCH-SEATING (FRONT)	25310	■	■	
UNIT - FOLDING ROOF CONTROL	25313	■	■	
COVERTIBLE TOP SWITCH	25362	■	■	
SWITCH - LIMIT, ROOF FRONT	25365	■	■	
SWITCH - LIMIT, REAR HATCH	25366	■	■	
SWITCH - LIMIT, ROOF REAR	25367	■	■	
BACK DOOR HATCH OPENER SWITCH	25380	■	■	
STORAGE OPENER SWITCH	25383	■	■	
SWITCH - TRUNK OPENER CANCEL	25385	■	■	
SWITCH - ROOF OPENER	25465	■	■	
SWITCH-SEAT MEMORY	25491	■	■	
SWITCH-SEAT MEMORY CANCEL	25492	■	■	
SWITCH SEATING (REAR)	25494	■	■	
PWR FOLD SEAT SWITCH NS	25502	■	■	
SPIRAL CABLE	25554	■		
REMOTE MIRROR SWITCH	25570	■	■	
WIPER ARM	26380	■		
REAR WIPER ARM	26390	■		
MOTOR-LIFT,3RD ROW	27381	■	■	
WASHER NOZZLE	27440	■		
REAR WASHER NOZZLE	27450	■		
WASHER TUBE	27460	■		
REAR WASHER TUBE	27470	■		
WIPER WASHER TANK	27480	■		
REAR WASHER TANK	27490	■		
HOSE ASSY- DRAIN, RR	27499	■		
BACK DOOR LOCK CONTROL UNIT	28451	■	■	
SENSOR-LIFT,3RD ROW	28477	■	■	
POWER SEAT CONTROL UNIT	28565	■	■	
CONTROL UNIT-2ND SEAT	28568	■	■	
CABLE-SEAT BACK RELEASE	36329	■		
HANDLE-TRUNK LID INSIDE RELEASE	36400	■		
CLUTCH PEDAL BUSHING	46526	■		
CLUTCH PEDAL	46540	■		
HOOD HINGE	65400	■		
HOOD STAY	65470	■		
HOOD LOCK	65601	■		
HOOD LOCK CABLE	65620	■		
BASE-CHARGE PORT	65712	■	■	
LOCK ASSY-OUTER LID,CHG PORT	65720	■		
THEFT WARNING PIN SWITCH	68542	■	■	
SUN ROOF LOCK	73520	■	■	
SUN ROOF FRAME/SEAL	73640	■		
SUN ROOF MOTOR GUIDE BRACKET	73670	■	■	
SUN ROOF LIMIT SWITCH	73678	■	■	
SUN ROOF MOTOR	73685	■	■	
SUN ROOF STRIKER	73812	■		
FEMALE LOCK	73820	■		
ROOF PANEL HINGE	73860	■		
DRAIN HOSE (SUNROOF)	73876	■	■	
SUNSHADE - SKYROOF	73960	■		
SEAT BELT/ANCHOR STAY	74830	■		
REAR SEAT BACK CENTER SUPPORT	76730	■		
REAR SIDE WINDOW HINGE	76829	■		
REAR SIDE WINDOW HANDLE	76870	■		
FINISHER - ROOF FRONT LATCH	76880	■		
UPPER RAIL GUIDE	77790	■		
REAR RAIL GUIDE	77796	■		
FUEL FILLER LID OPENER	78826	■		
FUEL LID ACTUATOR	78852	■	■	
REAR WINDOW MOTOR REGULATOR	79701	■	■	
FINISHER-REAR PARCEL SHELF SIDE RH	79910	■		
FINISHER-REAR PARCEL SHELF SIDE LH	79911	■		
FINISHER-REAR PARCEL SHELF	79912	■		
RR PARCEL SHELF BRACKET ASSY	79926	■		
FRONT DOOR HINGE	80400	■		
DOOR STOPPER LINK	80430	■		
FRONT LOCK ASSY	80502	■	■	
REMOTE CONTROL ROD	80512	■		
GUIDE PIN	80520	■		
PIN RECEIVER	80524	■		
LOCK STRIKER	80570	■		
LOCK KNOB	80595	■		
LOCK CYLINDER	80600	■		
FRONT OUTSIDE HANDLE	80605	■		
HANDLE ROD	80608	■		
FRONT INSIDE HANDLE	80670	■		
FRONT WINDOW REGULATOR	80700	■	■	
FRONT REGULATOR MOTOR	80730	■	■	
HOOK-SUNSHADE	82245	■		
LATCH FINISHER-SLIDE WINDOW	82345	■		
LATCH-SLIDE WINDOW	82347	■		
REAR DOOR HINGE	82400	■		
UPPER STOPPER	82440	■		
LOWER STOPPER	82442	■		
UPPER MALE DOVETAIL	82470	■		
UPPER FEMALE DOVETAIL	82472	■		
LOWER MALE DOVETAIL	82474	■		
SLIDE DOOR RELEASE CABLE	82476	■		
SLIDE DOOR RELEASE	82481	■		
REAR LOCK ASSY	82502	■	■	
LOCK KNOB ROD	82510	■		
REMOTE CONTROL ROD	82512	■		
MOTOR - CLOSING	82530	■	■	
AUTO DOOR LOCK ACTUATOR	82550	■	■	
MOTOR - SLIDE DOOR	82560	■	■	
LOCK STRIKER	82570	■		
MOTOR - BACK DOOR OPEN/CLOSE	82580	■	■	
LOCK KNOB	82595	■		
REAR OUTSIDE HANDLE	82605	■		
HANDLE ROD	82608	■		
BRACKET-OUTSIDE HANDLE	82610	■		
REAR INSIDE HANDLE	82670	■		
REAR WINDOW REGULATOR	82700	■	■	
REAR REGULATOR MOTOR	82730	■	■	
REGULATOR HANDLE	82760	■		
REAR SIDE WINDOW MOTOR	83500	■	■	
SLIDE DOOR LOCK ASSY	83502	■		
REAR SIDE WINDOW REGULATOR	83506	■	■	
REMOTE CONTROL ROD	83512	■		
OUTSIDE HANDLE	83605	■		
INSIDE HANDLE	83670	■		
REGULATOR WIRE	83752	■		
SLIDE DOOR ROLLER	83810	■		
SLIDE DOOR LINK	83840	■		
DECK LID LOCK STRIKER	84420	■		
LID OPENER LEVER	84440	■		
LID OPENER CABLE	84450	■		
DECK LID LOCK	84460	■		
TRUNK OPENER SOLENOID	84471	■	■	
MOTOR - STORAGE LID OPENER	84472	■	■	
SWITCH - STORAGE LID STOP	84480	■	■	
DECK LID HINGE	84510	■		
DECK LID TORSION BAR	84532	■		
TRUNK LID OPENER ACTUATOR	84680	■	■	
TRUNK LID LOCK ACTUATOR	84681	■	■	
RR BUMPER SHOCK ABS./STAY	85210	■		
RECLINING SWITCH	86401	■	■	
MOTOR ASSY-SLIDE	86911	■	■	
MOTOR/GEAR ASSY-SLIDE	86912	■	■	
3RD SEAT MTR DRIVESHAFT	86913	■	■	
3RD SEAT TRUNION	86914	■	■	
SEAT BELT SLIDE ASSY	86920	■	■	
RECL DEVICE LEVER	86970	■		
SWITCH-SEAT SLIDE	86982	■		
SWITCH ASSY-THIGH SUPPORT	87011	■	■	
SWITCH - SEAT BACK TILT	87017	■	■	
SWITCH - SEAT BACK TILT CANCEL	87018	■	■	
BACK VIBRATOR PLATE	87060	■		
CUSHION VIBRATOR PLATE	87080	■		
SEAT AIR CONTROL SWITCH	87106	■	■	
MOTOR ASSY-FAN	87305	■	■	
UNIT-FAN MOTOR CONTROL	87306	■	■	
BLOWER ASSY - FRONT SEAT	87334	■	■	
UNIT-HEAT SEAT/THERMOSTAT	87345	■	■	
SLIDE, LIFT SWITCH (PWR/SEAT)	87352	■	■	
SWITCH ASSY - FRONT SEAT (WITH OCS)	87354	■	■	
WIRE ASSY-RECLINING DEVICE	87403	■	■	
SPECIAL BOLT	87408	■		
FRT. SEAT LIMIT SWITCH	87504	■		
AIR PUMP	87652	■		
SLIDE ASSY (PWR/SEAT)	87653	■	■	
LIFT ASSY (PWR/SEAT)	87654	■	■	
ELECTRIC RECLINING DEVICE ASSY	87655	■	■	
LUMBER SUPPORT ASSY	87691	■		
LEVER-LUMBAR SUPPORT	87692	■	■	
ACTUATOR ASSY-REAR SEAT	88049	■		
FRAME&POWER UNIT-REAR SEAT	88060	■		
SEAT SWIVEL ASSY	88201	■		
2ND SEAT BACK HINGE	88350	■		
SWITCH WALK IN SEAT BACK SIDE	88406	■	■	
REAR RECLINING DEVICE ASSY	88451	■		
2ND SEAT SLIDE	88501	■		
SLIDE ASSY.—3RD SEAT	88505	■		
MOTOR ASSY-REAR SEAT	88510	■	■	
RELEASE HANDLE ASSY-REAR SEAT CUSHION	88552	■		
REAR SEAT BACK LOCK	88603	■		
REAR SEAT BACK STRIKER	88604	■		
HANDLE & CABLE-3RD SEAT	89045	■		
HINGE - 3RD SEAT LOWER	89130	■		
CABLE-SEAT LOCK	89200	■		
CABLE-HEAD REST, RELEASE	89201	■		
CABLE-SEAT BACK, RELEASE	89202	■		
3RD SEAT HINGE ASSY	89303	■	■	
GAS STAY	89306	■		
SEAT LOCK ASSY	89341	■		
LOCK ASSY—2ND SEAT	89342	■	■	
LEVER LOCK-3RD SEAT	89344	■		
LOCK ASSY-3RD SEAT	89391	■		
RECLINING DEVICE ASSY	89401	■	■	
LATCH ASSY - 3RD SEAT	89451	■		
RAIL ASSY—3RD SEAT	89552	■	■	
CABLE-SLIDE,3RD SEAT	89604	■		
BRACKET-BACK DOOR STAY	90459	■		
BACK DOOR LOCK & HANDLE	90502	■		
TAILGATE STOPPER	90510	■		
STRIP, PINCH, BACK DOOR	90523	■		
MOTOR - REAR HATCH CLOSURE	90552	■	■	
BACK DOOR CLOSURE MOTOR	90554	■	■	
TAILGATE WEDGE/DOVETAIL	90623	■		
TAILGATE HANDLE	90940	■		
MOTOR-SUN ROOF SHADE	91233	■	■	
SUN ROOF RAIL ASSY	91350	■		
CONNECTOR-DRAIN HOSE (SUNROOF)	91398	■	■	
HINGE ASSY-REAR GATE	93427	■		
BED RAIL	94412	■		
POWER SIDE STEP	96105	■		
ELECTRIC DOOR MIRROR	96302	■	■	
ELECTRONIC INSIDE REAR VEIW MIRROR	96321	■		
MIRROR ASSY-SMART ROOM	96323	■		
ACTUATOR MIRROR	96367	■	■	
SENSOR ASSY - DOOR MIRROR	96368	■	■	
POWER FOLD UNIT-MIRROR	96370	■	■	
A/T INDICATOR ASSY	96940	■	■	
RELEASE HANDLE-CONSOLE,REAR	96957	■		
FRAME ASSY - FOLDING ROOF	97004	■		
NO. 1 BOW ASSY	97012	■		
NO. 2 BOW ASSY	97020	■		
NO. 3 BOW ASSY	97040	■		
REAR FRAME	97061	■		
RECEIVER, PULL-DOWN LATCH	97082	■		
PULL-DOWN CLAMP ASSY	97087	■		
LATCH - ROOF FRONT	97088	■		
STAY - REAR HATCH	97089	■		
LOCK ASSY, REAR	97090	■		
HYDRAULTC PUMP	97091	■		
REAR LOCK STRIKER PIN	97092	■		
MOTOR - FOLDING ROOF	97093	■		
TOP FOLDING HOOK ASSY	97094	■		
REHOOK ASSY, TOP STACK	97097	■	■	
RAIL ASSY, FRONT	97100	■		
CYLINDER-ROOF LOCK	97102	■		
RAIL ASSY, CENTER	97106	■		
RAIL ASSY, REAR	97112	■		
LINK ASSY, BALANCE	97120	■		
MOTOR/RAIL - REAR HATCH	97125	■		
LINK, CONTROL	97132	■		
TOP STACK FOLDING BRACKET	97142	■		
BRACKET-FOLDING ROOF FRONT MOUNTING	97143	■		
BRACKET-FOLDING ROOF REAR MOUNTING	97145	■		
BALANCE SPRING	97146	■		
HEADLINER RETAINER, NO. 1 BOW	97164	■		
HEADLINER RETAINER, NO. 3 BOW	97167	■		
PLATE - FOLDING ROOF	97173	■		
WELT - FOLDING ROOF	97177	■		
SHIM - FOLDING ROOF	97179	■		
CENTER RAIL SHIM	97188	■		
HINGE ASSY, STORAGE LID	97240	■		
BAR, STORAGE LID	97242	■		
SHIM-STORAGE LID HINGE	97243	■		
DOVETAIL ASSY, STORAGE LID	97244	■		
RECEIVER, DOVETAIL	97246	■		
SPRING, STORAGE LID LOWER	97252	■		
ROLLER ASSY, STORAGE LID	97254	■		
GUIDE RAIL ASSY	97256	■		
DOVETAIL BOLT ASSY	97259	■		
LOCK ASSY, STORAGE LID	97260	■		
STRIKER, STORAGE LID	97262	■		
ACTUATOR ASSY, STORAGE OPENER	97264	■	■	
FRONT STORAGE LID BUMPER	97266	■		
CABLE ASSY, TOP STORAGE OPENER	97270	■		
CABLE ASSY, TOP OPENER	97273	■		
CENTER STORAGE LID BUMPER	97274	■		
ACTUATOR ASSY, TOP OPENER	97278	■	■	
SHADE ASSY-REAR SIDE WINDOW	97513	■		
SCREEN - REAR	97530	■		
SHADE ASSY-REAR WINDOW	97580	■		
SLIDING DOOR MOTOR	97930	■	■	
SWITCH PANEL PARTITION FRONT	98222	■	■	
SWITCH PANEL PARTITION REAR	98230	■	■	
AUTO DIMMING REAR VIEW MIRROR	AA293	■		
DECK LID GAS STRUT	K3185	■		
TOP LOGIC RELAY/JUMPER	K3353	■	■	
TOP MECHANISM CLAMP ASSY	K3658	■		
REAR SIDE WINDOW SWITCH/BEZEL	K4412	■	■	
FRT. DOOR GUIDE PIN/SECONDARY PIN	K5204	■		
DECK LID HINGE ASSY	K6658	■		
HYDRAULIC MOTOR/PUMP ASSY	K8048	■		
HYDRAULIC CYLINDER ASSY	K8049	■		
HOSE/BYPASS VALVE ASSY	K8097	■	■	
SIDE WINDOW REGULATOR ASSY	K8098	■		

BRAKES

		GOLD Pref & Wrap	SILVER Pref	POWERTRAIN Pref CPO/Certified Select
SENSOR ASSY - PRESS	22368	■	■	■
SENSOR ASSY-VACUUM	22369	■		
BOOSTER PRESSURE SENSOR	25085	■	■	
ABS MOTOR RELAY	25187	■	■	
VDC/TCS/ABS RELAY BOX	25285	■	■	
VDC/TCS/ABS CONTROL UNIT ASSY	25286	■	■	
TIRE PRESSURE MONITOR RELAY	25288	■	■	
STOP LAMP SWITCH	25320	■	■	
BRAKE CONTROL MODULE	26354	■	■	
SENSOR-LOW BRAKE PRESSURE	31960	■	■	
HAND BRAKE CONTROL	36010	■		
PARKING BRAKE SWITCH	36011	■	■	
PARKING ECU	36032	■	■	
PARKING BRAKE ACTUATOR ASSY	36035	■	■	
RATCHET NAIL	36320	■		
HAND BRAKE STEM	36326	■		
PARKING BRAKE RELEASE ROD	36327	■		
HAND BRAKE BRACKET	36328	■		
HAND BRAKE GUIDE	36335	■		
HAND BRAKE SPRING	36337	■		
HAND BRAKE CONTROL LEVER YOKE	36339	■		
HAND BRAKE LEVER	36372	■		
CLEVIS PIN (HAND BRAKE)	36381	■		
FRONT CABLE	36402	■		
CENTER LEVER BRACKET	36421	■		
ADJUSTER NUT	36437	■		
REAR CABLE	36450	■		
CROSS CABLE	36451	■		
REAR CABLE/ROD	36452	■		
CENTER LEVER	36510	■		
EQUALIZER	36518	■		
HANGER STRAP/SWING ARM	36525	■		
CLEVIS & PIN (HAND BRAK

ENGINE (cont.)

Part	No.	GOLD Pref & Wrap	SILVER Pref	POWERTRAIN Pref CPO/Certified Select
CONVERTER HOSE ASSY	21508	■	■	
RESERVOIR TANK	21510	■	■	■
RESERVOIR TANK BRACKET	21511	■		
SUB RAD RESERVOIR TANK	21512	■	■	■
PIPE ASSY-CONVERTER INLET	21513	■		
HOSE-CONVERTER OUTLET	21514	■	■	
RESERVOIR TANK HOSE	21515	■	■	
PIPE ASSY-CONVERTER INLET	21516	■		
PUMP HOSE ASSY	21517	■	■	
HOSE-UPPER, SUB RADIATOR	21525	■	■	
HOSE-LOWER, SUB RADIATOR	21526	■	■	
HOSE INVERTER OUTLET	21534	■	■	
PIPE-PUMP INLET	21537	■		
ELECTRIC WATER PUMP	21580	■	■	■
MOTOR ASSY WATER PUMP	21581	■	■	■
THERMO SWITCH	21595	■	■	
RADIATOR FAN MOTOR	21597	■	■	■
TUBE ASSY	21620	■		
OIL COOLER PIPING	21636	■	■	
TRANSISTOR IGNITION UNIT	22020	■	■	■
EGR WATER TEMP SENSOR	22120	■	■	
VACUUM GALLERY	22310	■		
VIAS VENT HOSE	22320	■		
HOSE - VACUUM	22321	■		
SENSOR-TEMPERATURE,CHARGE AIR COOLER OUTLET PRESSURE	22350	■	■	■
SENSOR-TEMPERATURE,CHARGE AIR COOLER OUTLET	22351	■	■	■
BOOST SENSOR	22364	■	■	■
EGR VACUUM CONTROL VALVE	22365	■		
ABSOLUTE PRESSURE SENSOR	22366	■	■	■
IGNITION COIL/PWR TRANSISTOR	22433	■	■	■
HIGH TENSION CABLE	22450	■		
RESISTOR	22460	■		
IGNITION COIL PROTECTOR	22465	■		
AIR CUT VALVE	22622	■		
SCV SERSOR ASST	22623	■	■	■
FR EXHAUST TEMP GAS SENSOR	22624	■	■	■
FUEL TEMP SENSOR	22629	■	■	■
TANK FUEL TEMPERATURE SENSOR	22634	■	■	■
FUEL DAMPER	22675	■		
AIR FUEL RATIO SENSOR	22689	■	■	■
ECC MAIN RELAY	22696	■	■	
DROPPING RESISTOR	22698	■		
ALTERNATOR	23100	■	■	■
ALTERNATOR ROTOR	23108	■	■	■
ALTERNATOR BEARING	23120	■	■	■
ALTERNATOR BRUSH & HOLDER	23133	■	■	■
ALTERNATOR PULLEY	23150	■	■	■
IC VOLTAGE REGULATOR	23215	■	■	■
STARTER MOTOR ASSY	23300	■	■	■
FIELD COIL	23306	■	■	■
ARMATURE	23310	■	■	■
CLUTCH PINION	23312	■	■	■
REDUCTION GEAR	23313	■	■	■
STARTER SOLENOID	23343	■	■	■
BRUSH	23380	■	■	■
CRANKSHAFT POS. SENSOR (OBD POS)	23731	■	■	■
CRANKSHAFT POS. SENSOR (REF)	23732	■	■	■
SENSOR-IDLE STOP	23737	■	■	■
VVL ACTUATOR ASSY	23745	■	■	■
IVTC POSITION SENSOR NS	23750	■	■	■
MOTOR ASSY - ACTUATOR	23753	■	■	■
CONTROL UNIT-ELECTRIC VALVE TIMING	23754	■		
VTC-ELECTRIC	23756	■	■	■
VTC ASSY-ELECTRIC	23757	■	■	■
MODULE-VCR CONTROL	23780	■	■	■
VTC SOLENOID ASSY	23796	■	■	■
ENGINE SUB HARNESS	24079	■	■	■
BATTERY VENT TUBE	24413	■	■	
BATTERY VENT TUBE	24414	■	■	
BATTERY FRAME/TRAY/ROD	24428	■		
EGR CONTROL UNIT	25024	■	■	■
FUEL TANK SENSOR	25060	■	■	
COOLANT TEMP SENSOR	25080	■	■	■
SENSOR-WATER LEVEL	25083	■	■	
EVAP CONTROL SYST PRESS SENSOR	25086	■	■	
RADIATOR FAN RELAY	25217	■	■	
OIL PRESSURE SENDING UNIT	25240	■	■	
OIL PRESSURE SWITCH	25244	■	■	
COOLING FAN CONTROL	25305	■	■	
EGR RESERVOIR TANK	27085	■		
221-WATER CONTROL COCK	27117	■	■	■
FLYWHEEL HOUSING NS	32040	■	■	■
ELECTRO HYDRAULIC CNT	32085	■	■	■
PLUG ASSY-DRAIN	32101	■	■	■
PLUG ASSY-DRAIN	32111	■	■	■
PRESSURE TUBE	45455	■		
QUICK CONNECTOR ASSY AIR PRESSURE TUBE	45456	■		
SENSOR-TURBOCHARGER SPEED	59126	■	■	■
BRACKET ASSY-CHARGE PORT	62551	■		
ENGINE MOUNTING BRACKET	75117	■		
ADAPTER-FILTER HEAD	78323	■		
VACUUM HOSE	90004	■	■	
VALVE ASSY WATER	92231	■		
TUBE-BOOST SENSOR	97195	■	■	
INSULATOR-INTAKE PORT	110D0	■	■	■
INSULATOR-REAR MOTOR MOUNT, FRONT	11211	■	■	■
SENSOR ASSY - TURBO SPEED	144A3	■	■	■
TURBO MOUNTING KIT, REMAN	144D1	■	■	■

FUEL SYSTEM

Part	No.	GOLD Pref & Wrap	SILVER Pref	POWERTRAIN Pref CPO/Certified Select
FAST GLOW CONTROL UNIT	11067	■	■	■
VALVE ASSY - INTAKE BYPASS	14466	■	■	■
HOSE - AIR, SUCTION	14468	■	■	
POWER VALVE SOLENOID VALVE ASSY	14517	■	■	■
VACUUM PUMP ASSY	14650	■	■	■
EXHAUST TEMP SENSOR	14730	■		
BPT VALVE	14741	■		
A.I.V. UNIT CASE	14810	■		
PUMP ASSY-AIR	14812	■		
A.I.V. TUBE	14821	■		
AIR INJECTION PIPE	14823	■		
VALVE ASSY- AIR CUT SOLENOID	14830	■		
AIR CONTROL VALVE	14832	■		
A.B. VALVE	14835	■		
AIR INJECTION VALVE	14854	■		
HOSE ASSY-AIR	14858	■	■	
EC-HOSE	14860	■	■	
CONNECTOR-HOSE,3WAY	14877	■	■	
CONNECTOR-HOSE	14879	■	■	
A.I.V. BOX	14880	■		
TUBE-EVAP CONTROL	14912	■		
EC-BOOST CONTROL VALVE	14920	■	■	
SERVICE PORT-EVAP.	14939	■	■	■
ASSY-PURGE PUMP	14941	■		
SCV SOLENOID VALVE	14951	■	■	■
POWER VALVE SOLENOID	14952	■	■	■
SOLENOID VALVE ASSY	14955	■	■	
PURGE CONTROL	14956	■	■	
EVAP VACUUM TANK	14958	■	■	
EVAP CANISTER VENT	14960	■	■	■
THROTTLE CHAMBER	16118	■	■	■
PROTECTOR-FUEL RAIL,D-INJ HIGH PRESSURE	16265	■		
FUEL PUMP ASSY - HIGH PRESSURE	16630	■	■	■
INSULATOR-FUEL PUMP,HIGH PRESSURE	16634	■		
FUEL PRESSURE SENSOR	16637	■	■	■
FUEL PUMP - IN TANK	17040	■	■	■
FUEL CONNECTOR	17103	■		
THROTTLE CHAMBER	17118	■	■	■
FUEL TANK	17201	■	■	■
TUBE ASSY FILLER	17220	■		
FUEL FILLER NECK	17222	■	■	■
FUEL FILLER CAP	17251	■		
FUEL CHECK VALVE	17330	■		
TUBE ASSY - FUEL FEED	17502	■	■	■
PROTECTOR-FUEL RAIL	17524	■		
UREA FILLER TUBE ASSY	20421	■		
UREA FILLER HOSE ASSY	20424	■	■	
UREA FLUID PUMP ASSY	20440	■		
UREA TANK CONTROLLER ASSY	20443	■	■	
UREA TANK CONTROLLER HARNESS	20458	■	■	■
WATER HOSE ASSY - INLET, AIR COOLER	21518	■	■	
WATER HOSE ASSY - OUTLET, AIR COOLER	21520	■	■	
DETONATION SENSOR	22060	■	■	■
VACUUM TANK	22327	■		
VIAS VACUUM TANK ASSY	22328	■		
CK SWITCH—CANISTER VAC CNTRL	22360	■		
VACUUM SWITCH	22361	■	■	
CONTROL UNIT - EFI	22611	■	■	■
BRACKET-ECM	22612	■		
THROTTLE VALVE SWITCH	22620	■	■	
EXHAUST GAS TEMP SENSOR	22630	■	■	■
AIR TEMPERATURE SENSOR	22631	■	■	■
CYLINDER HEAD TEMP SENSOR	22632	■	■	■
SENSOR-EXHAUST GAS TEMPERATURE	22640	■	■	■
AIR REGULATOR	22660	■	■	■
PRESSURE REGULATOR	22670	■	■	■
PRESSURE REG. CONTROL MODULE	22671	■	■	
AIR FLOW METER	22680	■	■	■
AIR FLOW METER BRACKET	22682	■		
VACUUM CONTROL VALVE	22686	■	■	■
02 SENSOR	22690	■	■	■
REAR OXYGEN 02 SENSOR	22691	■	■	■
DROPPING RESISTOR	22695	■		
MAIN & FUEL PUMP RELAY	22697	■	■	
SENSOR ASSY - DPF PRESSURE	22770	■	■	
SENSOR ASSY - NOX	22790	■	■	
CRANK ANGLE SENSOR	23730	■	■	■
CRANK POSITION SENSOR—RING GEAR	23733	■	■	■
A.A.C. VALVE	23781	■	■	■
EFI HARNESS	24011	■	■	■
SOLENOID-COMPRESSOR BYPASS VALVE	25679	■	■	
BASE ASSY-FUEL FILLER	78120	■	■	
FUELING STOPPER ASSY	78402	■		
HOUSING-STAGE2,FUEL FILTER	78507	■		
HOUSING-FUEL FILTER	78509	■		
SENSOR ASSY - DPF PM, REAR	227A3	■	■	

HYBRID / ELECTRIC

Part	No.	GOLD Pref & Wrap	SILVER Pref	POWERTRAIN Pref CPO/Certified Select
INVERTER O-RING	14457	■	■	■
BRUSH-EARTH	23390	■	■	■
HYBRID VEH CNTRL (ECU)	23700	■		
EV DRIVE MOTOR CONTROL MODULE	23740	■		
INVERTER CONTROL ASSY	25333	■		
INVERTER CONTROL UNIT	25334	■		
CONTROL ASSY-STARTUP SOUND	28150	■		
TRACTION MOTOR ASSY	29000	■	■	■
BRUSH ASSY	29017	■	■	■
MOTOR ASSY-DRIVE,REAR	29020	■	■	■
INVERTER (PCU)	29100	■		
INVERTER COMPL-POWER HEAD	29101	■	■	■
HOUSING ASSY-CONNECTOR	29110	■		
INVERTER ASSY	29111	■	■	■
HARNESS ASSY-HIGH VOLTAGE	29115	■	■	■
INVERTER COVER BRACKET	29153	■		
BOX ASSY-DC/DC	29201	■	■	■
POWER CONVERTER BOX ASSY	29202	■	■	■
CONVERTER ASSY	29210	■	■	■
COVER-PDM	29230	■		
BATTERY CONTROLLER ASSY	29300	■	■	
BATTERY CONTROL ASSY	29310	■	■	
JUNCTION NO2 BOX ASSY	29401	■	■	
JUNCTION BOX ASSY	29410	■	■	
BATTERY COOLING FAN	29500	■	■	
BUS BAR REAR MODULE	29501	■	■	
SENSOR ASSY-BATTERY	29502	■	■	
BATTERY SENSOR ASSY	29504	■	■	
BUS BAR LH MODULE	29505	■	■	
BUS BAR MAIN RH MODULE	29506	■	■	
BATTERY COOLER	29512	■	■	
BATTERY CONNECTOR BASE	29531	■	■	
CHARGER ASSY-BATTERY	29610	■	■	
BATTERY CHARGE PORT UNIT	29612	■	■	
CELL MODULE SOLAR	29620	■	■	
EVSE PACKAGE	29621	■	■	■
INSULATOR	29640	■	■	■
SWITCH - DISCONNECT SERVICE	29701	■	■	
CABLE POWER CONV TO COMPRESR	29702	■	■	■
CABLE PWR CONV TO LI-ION PAK	29703	■	■	■
CABLE (ON BOARD CHARGER TO DC/DC-J/B)	29707	■	■	■
SW-DISCONNECT SERVICE	29711	■	■	
BATTERY UPPER COOLING DUCT	29714	■		
BATTERY LOWER COOLING DUCT	29715	■		
BATTERY SIDE COOLING DUCT	29716	■		
BODY SIDE BATTERY COOLG DUCT	29717	■		
TRANSAXLE & MOTOR GENERATOR	31021	■	■	■
OIL PUMP & MOTOR ASSY	31337	■	■	■
LEVER	31965	■		
MANUAL TRANSMISSION ASSY / REDUCER	32010	■	■	■
BATTERY FAN INLET DUCT	96712	■		
BATTERY COOLING DUCT INLET	96713	■		
WATER TUBE ASSY- FLOOR,REAR	21530	■	■	
WATER HOSE- DRIVE MOTOR,REAR	21531	■	■	
WATER HOSE-TRACTION MOTOR REAR	21555	■	■	
WATER HOSE-TRACTION MOTOR CENTER	21556	■	■	
WATER HOSE-TRACTION MOTOR FRONT	21557	■	■	
WATER TUBE-TRACTION MOTOR REAR	21558	■	■	
WATER TUBE-TRACTION MOTOR CENTER	21559	■	■	
WATER TUBE-TRACTION MOTOR FRONT	21560	■	■	
EV CONTROL BRACKET	237D1	■		
GASKET	290H9	■	■	■
TRACTION MOTOR TERMINAL COVER	290T5	■	■	■
BRUSH-EARTH	290T7	■	■	■
TRACTION MOTOR ASSY- WATER INLET	290Y5	■	■	■
O-RING SEAL	290Y6	■	■	■
POWER HEAD INVERTER SEAL	291A0	■	■	■
GUSSET	291C1	■	■	■
INVERTER COVER	291X2	■		
POWER CONVERTER BOX ASSY	292A2	■	■	
POWER DELIVERY MODULE	292C0	■	■	■
CABLE ASSY JNTCN TO PWR HEAD	297A0	■	■	■

INFOTAINMENT

Part	No.	GOLD Pref & Wrap	SILVER Pref	POWERTRAIN Pref CPO/Certified Select
REAR WINDOW ANTENNA AMP	25190	■	■	
RELAY-AUDIO AMP	25198	■	■	
NAVI SPEAKER RELAY	25273	■	■	
CONTROL ASSY-IT MASTER	25914	■	■	
NAVI GPS ANTENNA ASSY	25957	■	■	
AUX JACK-AUDIO	26823	■	■	
CABLE-GPS ANTENNA FEEDER	27531	■	■	
SPEAKER	27933	■	■	
CABLE-AUX AUDIO SYSTEM	27946	■	■	
ANTENNA	27960	■	■	
CONDENSER	27984	■	■	
RADIO FINISHER	28041	■	■	
TUNER ASSY - AV	28050	■	■	
PRE-AMP SPEAKER AMP	28060	■	■	
POWER SUPPLY BOX	28089	■	■	
VIDEO OR NAVI DISPLAY ASSY	28090	■	■	
FES Video Monitor	28091	■	■	
DISPLAY ASSY-INTEGRATED	28094	■	■	
CABLE-LVDS AUDIO SYSTEM	28096	■	■	
DVD UNIT	28119	■	■	
SWITCH ASSY-DISK EJECT	28123	■	■	
TWEETER-RR DOOR	28138	■	■	
CHANGER-CD AUTO	28184	■	■	
ANT ASSY-SAT	28208	■	■	
ANTENNA ROD/MAST	28215	■	■	
SAT ANTENNA ASSY	28228	■	■	
FEEDER ASSY - ANTENNA	28243	■	■	
FEEDER ASSY (TEL ADPTR/BLUE TOOTH)-ANT	28245	■	■	
ANTENNA-ADAPTOR	28247	■	■	
CONTROL PANEL-FES	28259	■	■	
AUDIO CONTROLLER ASSY	28261	■	■	
SWITCH-REMOCON	28267	■	■	
REMOTE RADIO SWITCH	28268	■	■	
PHONE-HEAD	28310	■	■	
UNIT-MICROPHONE MIXING	28312	■	■	
CONTROL ASSY-AUDIO VISUAL	28330	■	■	
CONTROL UNIT ASSY-DISPLAY	28332	■	■	
TRANSFER ASSY - NAVI	28344	■	■	
BONDING (GROUNDING) WIRE	28360	■	■	
NOISE SUPPRESSOR COIL	28363	■	■	
SWITCH ASSY-ITS & AUDIO	28394	■	■	
TV SWITCH ASSY	28395	■	■	
UNIT AVM CONTROL	28406	■	■	
CONTROL UNIT-AUX AUDIO SYSTEM	28411	■	■	
CONNECTOR-AUX AUDIO SYSTEM	28413	■	■	
FES Video Cassette Player	28706	■	■	
BALANCER-SOUND	29350	■	■	
CLARION AUDIO/COMBO UNIT	2790A	■	■	
PANASONIC AUDIO/COMBO UNIT	2790C	■	■	
ELD (QUEST) RADIO/COMBO UNIT	2790F	■	■	
BOSE SPEAKER	2793A	■	■	
CLARION SPEAKER AMP	2806C	■	■	
ELD (QUEST)SPKR AMP	2806F	■	■	
SPEAKER - WOOFER	2806H	■	■	
PANASONIC (QST) SPKR AMP	2806P	■	■	
SONY SPKR AMP	2806S	■	■	
CLARION CD PLAYER	2818A	■	■	
PANASONIC CD PLAYER	2818C	■	■	
SONY CD PLAYER	2818D	■	■	
ALPINE CD PLAYER	2818E	■	■	
ELD(QST)CD PLAYER	2818F	■	■	
DVD VIDEO CONSOLE	AA017	■	■	
MOBILE ENT SYS	AA018	■	■	
SATELLITE RADIO ANTENNA ASSY	AA025	■	■	
AV TUNER/SAT	AA055	■	■	
CD CHANGER CARTRIDGE	B8118	■	■	

STEERING

Part	No.	GOLD Pref & Wrap	SILVER Pref	POWERTRAIN Pref CPO/Certified Select
IDLER PULLEY BRACKET	11935	■		
POWER STEERING PUMP BRACKET	11940	■		
HICAS RELAY	25247	■	■	
SLIP RING	25694	■	■	■
STEERING SENSOR ASSY	28475	■	■	
STEERING ANGLE SENSOR	28476	■	■	
HICAS CONTROL UNIT	28505	■	■	
STEERING STOPPER PLATE	40040	■	■	■
RACK & PINION ASSY	48001	■	■	■
STEERING GEAR ASSY	48010	■	■	■
STEERING GEAR HOUSING	48011	■	■	■
STEERING GEAR PINION	48023	■	■	■
WORM GEAR BEARING	48025	■	■	■
FILLER PLUG	48060	■	■	
UPPER STEERING JOINT ASSY	48071	■	■	■
STEERING LOWER JOINT	48080	■	■	■
STEERING RACK	48100	■	■	■
SECTOR SHAFT	48103	■	■	■
WORM OIL SEAL	48125	■	■	■
SECTOR SHAFT BEARING	48127	■	■	■
SECTOR SHAFT ADJUST SCREW/NUT	48135	■	■	■
SECTOR SHAFT OIL SEAL	48137	■	■	■
STEERING WORM ASSY	48150	■	■	■
SECTOR SHAFT COVER	48201	■	■	■
STEERING GEAR BOOT	48203	■	■	■
SECTOR SHAFT COVER GASKET	48204	■	■	■
REAR HOUSING	48210	■	■	■
REAR HOUSING CAP	48212	■	■	■
REAR HOUSING OIL SEAL	48214	■	■	■
ADJUSTER	48231	■	■	■
RACK MOUNT CLAMP	48353	■		
RACK MOUNT INSULATOR	48376	■		
POWER STEERING HEAT INSULATOR	48382	■		
STEERING WHEEL	48400	■		
LOCK NUT	48401	■		
HORN BUTTON ASSY	48420	■	■	■
STEERING GEAR ARM	48502	■	■	■
STEERING GEAR LOCK NUT	48503	■	■	■
SIDE ROD ASSY	48510	■	■	■
SIDE ROD BAR	48512	■	■	■
LOCK NUT	48514	■	■	■
OUTER SOCKET	48520	■	■	■
INNER SOCKET	48521	■	■	■
SLOTTED NUT	48523	■	■	■
STEERING IDLER ARM	48530	■	■	■
STEERING IDLER FIXING BOLT	48534	■	■	■
STEERING IDLER LOCK NUT	48535	■	■	■
CROSS ROD	48560	■	■	■
SIDE ROD CLIP	48562	■	■	■
STEERING DAMPER	48611	■	■	
STEERING LOCK	48700	■	■	
A/T SHIFTLOCK SYSTEM	48712	■	■	
TRANSFER GEAR ASSY	48760	■	■	
STEERING COLUMN SHAFT	48820	■	■	■
UPPER COLUMN SHAFT	48821	■	■	■
JACKET TUBE AND CLAMP ASSY	48850	■	■	■
JACKET TUBE	48860	■		
UPPER JACKET TUBE	48861	■		
COVER ASSY RETAINER BRACKET	48958	■		
STEERING COLUMN CLAMP	48960	■		
TILT LEVER	48970	■		
TILT MOTOR ASSY	48990	■		
TELESCOPIC MOTOR ASSY	48991	■		
TILT SENSOR ASSY	48992	■		
TELESCOPIC SENSOR ASSY	48993	■		
POWER STEERING GEAR ASSEMBLY	49001	■	■	■
POWER STEERING PUMP	49110	■	■	■
PUMP RESERVOIR TANK	49115	■		
PUMP CAP	49181	■		
OIL PUMP FILTER	49182	■	■	■
TANK COVER - OIL PUMP	49185	■	■	■
POWER STEERING GEAR ASSEMBLY	49200	■	■	■
O-RING	49203	■	■	■
PINION OIL SEAL	49226	■	■	■
RACK PACKING	49297	■	■	■
STUB SHAFT SEAL	49365	■	■	■
RACK BUSHING	49522	■	■	■
O-RING	49525	■	■	■
CYLINDER TUBE	49541	■	■	
HOSE/TUBE-PUMP TO GEAR	49710	■	■	
PRESSURE TUBE ASSY	49716	■	■	
HOSE ASSY-SUCTION, POWER STEERING	49717	■	■	
TUBE ASSY-POWER STEERING	49719	■	■	
HOSE/TUBE-GEAR TO PUMP	49720	■	■	
POWER STEERING OIL COOLER	49721	■	■	
P/S TUBE HOSE	49722	■	■	
HOSE-RETURN, POWER STEERING	49724	■	■	
POWER STEERING RETURN HOSE	49725	■	■	
BREATHER TUBE	49731	■	■	
POWER STEERING OIL SWITCH	49761	■	■	
AIR CONTROL VALVE	49762	■	■	
FLOW CONTROL VALVE	49810	■	■	■
PRESSURE CONTROL VALVE ASSY	49836	■	■	
ELECTRIC CYLINDER ASSY	55705	■	■	■
HICAS POWER CYLINDER ASSY	55710	■	■	■
HICAS MOTOR ASSEMBLY	55740	■	■	
POSITION SENSOR ASSY - MAIN	55741	■	■	
POSITION SENSOR ASSY - SUB	55742	■	■	
PRESSURE REAR TUBE/HOSE SET	55750	■	■	

SUSPENSION

Part	No.	GOLD Pref & Wrap	SILVER Pref	POWERTRAIN Pref CPO/Certified Select
SELECT SWITCH	25140	■	■	
SUSPENSION CONTROL UNIT	25963	■	■	
AIR SUSPENSION CONTROL ASSY	28581	■	■	
KNUCKLE SPINDLE (FWD) & (REAR)	40014	■	■	■
KING PIN	40022	■	■	■
KING PIN BEARING	40030	■	■	■
STEERING STOPPER BOLT	40038	■		
STOPPER BOLT CAP	40039	■		
KNUCKLE ARM	40052	■	■	■
DRIVE SHAFT BOOT	40088	■		
UPPER BALL JOINT	40110	■	■	■
LOWER BALL JOINT	40160	■	■	■
LOWER BALL JOINT SEAT	40173	■	■	■
BEAM—REAR AXLE	43011	■	■	
SEAT-LOWER BALL JOINT	43173	■	■	■
AIR COMPRESSOR ASSY	53400	■	■	
REAR "B" TANK TUBE ASSY	53530	■		
REAR "A" TANK TUBE ASSY	53546	■		
HEIGHT SENSOR ASSY	53810	■		
SENSOR ROD ASSY	53820	■		
FRONT SPRING	54010	■	■	■
SPRING SEAT	54036	■	■	■
BOUND BUMPER	54050	■		
REBOUND BUMPER	54053	■		
STRUT DUST COVER	54055	■	■	■
STRUT DUST SEAL	54059	■		
TORQUE ARM	54080	■		
ANCHOR ARM	54210	■		
ANCHOR ADJ. BOLT & NUT	54216	■		
STRUT ASSY	54302	■	■	■
STRUT INSULATOR	54320	■	■	■
STRUT BEARING	54325	■	■	■
FRONT REBOUND STOPPER	54340	■	■	■
REBOUND STOPPER	54342	■	■	■
ADJ. SHOCK SUB-HARNESS	54390	■	■	■
FRONT SUSPENSION MEMBER	54401	■	■	■
SUPPORT BRACKET - FRNT SUSP MEM	54402	■	■	■
LINK SPINDLE	54419	■	■	■
FRONT CROSSBAR ASSY	54424	■	■	■
BRACKET - REAR SUSPENSION ARM	54430	■	■	■
FRONT SUSPENSION STAY	54466	■	■	■
COMPRESSION ROD	54468	■	■	■
TENSION ROD	54470	■	■	■
TENSION/COMPRESSION ROD	54471	■	■	■
TENSION ROD BUSHING	54476	■	■	■
TENSION ROD BRACKET	54480	■	■	■
FRONT SUSP DAMPER	54490	■	■	■
TRANSVERSE LINK GUSSET	54499	■	■	■
BUSHING	54504	■	■	■
UPPER LINK BUSHING	54507	■	■	■
UPPER LINK ASSY	54524	■	■	■
UPPER LINK BRACKET	54527	■	■	■
TRANSVERSE LINK	54529	■	■	■
UPPER LINK	54533	■	■	■
BUSHING	54535	■	■	■
UPPER LINK SPINDLE	54536	■	■	■
STEERING KNUCKLE EXTENSION	54590	■	■	■
FRONT STABILIZER	54611	■	■	■
BRACKET & BUSHING	54614	■	■	■
CONNECTING ROD BUSHING	54618	■	■	■
ROC-RR STAB. LAUNCHING	54619	■	■	■
CON ROD BRKT ASSY	54650	■	■	■
BRACKET	55015	■	■	■
LOWER LINK ASSY	55019	■	■	■
REAR SPRING	55020	■	■	■
UPPER LINK	55023	■	■	■
PARALLEL ROD	55024	■	■	■
REAR SPRING SEAT RUBBER	55036	■		
SPRING MOUNT BUSHING	55044	■	■	■
SUSPENSION ARM BUSHING	55045	■	■	■
SHACKLE BUSHING	55046	■	■	■
LOWER LINK BUSHING	55047	■	■	■
UPPER LINK BUSHING	55048	■	■	■
LOCATION PLATE	55054	■		
SILENCER - SPRING	55090	■		
REAR SUSPENSION LOWER LINK ASSY	55100	■		
RADIUS ROD LINK	55110	■		
FRONT LOWER LINK ASSY	55111	■		
REAR UPPER SUSPENSION ARM	55120	■		
LINK ASSY-RR SUSPENSION UPPER FR	55121	■		
CONTROL ROD	55122	■	■	■
PANHARD ROD	55130	■		
LINK ASSY-RR SUSPENSION UPPER RR	55131	■	■	■
PANHARD ROD BUSHING	55135	■	■	■
RADIUS ROD AND BOLT	55140	■		
RADIUS ROD BUSHING	55142	■		
REAR AXLE BALL JOINT ASSY	55154	■	■	■
SPRING MOUNT	55202	■		
SPRING SHACKLE	55220	■		
REAR SPRING PIN	55225	■		
SUSPENSION ARM BOLT	55226	■		
SPRING LOCK PLATE	55227	■		
BOUND BUMPER	55240	■		
STRUT BOUND BUMPER	55241	■		
SPRING PAD (LEAF)	55243	■		
SPRING CLIP	55247	■		
LOWER LINK BRACELET	55252	■		
SPRING SEAT (LEAF)	55262	■		
UPPER LINK BRACKET	55270	■		
REAR STRUT ASSY	55302	■	■	■
MOUNTING INSULATOR	55320	■	■	■
REAR SUSPENSION MEMBER	55401	■	■	■
DIFFERENTIAL MOUNTING BRACKET	55419	■		
TORQUE ARRESTER	55425	■	■	■
STAY-RR SUSPENSION MEMBER	55451	■		
DIFFERENTIAL MOUNTING MEMBER	55470	■		
DIFFERENTIAL MOUNTING BRACKET	55471	■		
PARALLEL ROD BUSHING	55480	■	■	■
DIFFERENTIAL MOUNTING INSULTR	55484	■		
DYNAMIC DAMPER ASSY	55490	■		
SUSPENSION BAR (MULTI-LINK)	55495	■		
TORSION BEAM — REAR AXLE	55500	■	■	
SUSPENSION ARM ASSY	55501	■	■	■
PROTECTOR-REAR AXLE	55514	■		
ANCHOR ARM	55520	■		
PARALLEL ROD BOLT	55524	■		
BUSHING	55743	■	■	■
CUT OFF VALVE ASSY	55780	■		
REAR STABILIZER	56230	■	■	■
CONNECT ROD BUSHING	56231	■	■	■
BRACKET-RR STABILIZER	56233	■		
REAR STABILIZER BUSHING	56235	■	■	■
MOUNTING BRACKET BUSHING	56243	■	■	■

TRANSMISSION / TRANSFER CASE

Part	No.	GOLD Pref & Wrap	SILVER Pref	POWERTRAIN Pref CPO/Certified Select
BRACKET-TRANSMISSION FRONT MOUNT	11333	■		
BRACKET-TRANSMISSION REAR MOUNT	11342	■		
THERMOSTAT-CVT HEATER	21210	■	■	■
BRACKET-HEAT EXCHANGER	21605	■		
A/T OIL COOLER ASSY	21606	■	■	
A/T COOLER BYPASS VALVE	21607	■		
WARMER ASSY-A/T OIL	21608	■	■	■
OIL COOLER VALVE ASSY	21619	■	■	
OIL COOLER TUBE	21621	■	■	
OIL COOLER HOSE	21631	■	■	
O.D. CANCEL/POWER SWITCH	25130	■	■	
SHIFT PATTERN SELECT SWITCH	25131	■	■	
SWITCH ASSY - MT SYNCRO	25133	■	■	
SHIFT LOCK RELAY	25206	■	■	
TRANSFER RELAY	25249	■	■	
TCM CONTROL RELAY NS	25299	■	■	
CLUTCH INTERLOCK SWITCH	25327	■	■	
KICKDOWN SWITCH	25390	■	■	
INTERLOCK CONTROL UNIT	28491	■	■	■
TRANSFER CONTROL UNIT	28495	■	■	■
TRANSFER MOTOR ASSY	29010	■	■	■
POWER HEAD BRACKET	29433	■		
POWER CLUTCH ASSY	30050	■	■	■
BRUSH HOLDER ASSY	30051	■	■	■
CLUTCH HOUSING	30400	■	■	■
CLUTCH WITHDRAWAL LEVER	30531	■	■	■
WITHDRAWAL LEVER PIN	30537	■	■	■
CLUTCH DAMPER	30600	■		
RESERVOIR TANK	30609	■		
CLUTCH MASTER CYLINDER	30610	■		
CYLINDER ASSY-CONCENTRIC SLAVE	30619	■		
CLUTCH OPERATING CYLINDER	30620	■		
BLEEDER (CLUTCH)	30621	■		
PUSH ROD	30628	■		
CLUTCH BOOSTER	30630	■		
PUSH ROD	30631	■		
CHECK VALVE ASSY	30639	■		
FLUID FILLER TUBE	30645	■		
CLUTCH TUBE/LINE (METAL)	30650	■		
BRANCH CONNECTOR	30656	■		
CLUTCH VACUUM HOSE	30664	■		
AIR BLEED CONNECTOR	30665	■		
CLUTCH OPERATING CABLE	30670	■		
CONVERTER BOLT	31009	■	■	■
AUTOMATIC TRANS ASSY	31020	■	■	■
A/T CONTROL UNIT	31036	■	■	■
UNIT-SHIFT BY WIRE	31039	■	■	■
O.D. INDICATOR SWITCH	31041	■	■	■
THROTTLE CABLE	31051	■	■	■
VACUUM TUBE	31061	■		
OIL LEVEL GAUGE	31080	■		
DRAIN PLUG	31084	■	■	■
GAUGE-OIL LEVEL	31086	■		
TORQUE CONVERTER	31100	■	■	■
PRIMARY PULLEY ASSY (CVT)	31210	■	■	■
SECONDARY PULLEY ASSY (CVT)	31211	■	■	■
STEEL BELT (CVT)	31240	■	■	■
OIL COOLER VALVE (CVT)	31271	■	■	■
CLUTCH HOUSING (CVT)	31300	■	■	■
CONVERTER HOUSING	31301	■	■	■
CONVERTER HOUSING GASKET	31309	■	■	■
TRANSMISSION CASE	31310	■	■	■
O.D. CASE (4 SP)	31322	■	■	■
LUBRICATION PIPE (CVT)	31328	■	■	■
REAR EXTENSION (ADAPTOR)	31330	■	■	■
CONTROL CYLINDER	31331	■	■	■
REAR EXTENSION GASKET	31335	■	■	■
REAR EXTENSION OIL SEAL	31336	■	■	■
OIL PUMP SUB HOUSING	31342	■	■	■
FRONT OIL SEAL	31343	■	■	■
OIL PUMP HOUSING SEAL	31344	■	■	■
OIL PUMP ROTOR SET	31345	■	■	■
OIL PUMP ASSY - ELECTRICAL	31347	■	■	■
OIL PUMP SHAFT ASSY (CVT)	31359	■	■	■
LOCKNUT (CVT)	31365	■	■	■
OIL PUMP GASKET	31366	■	■	■
BEARING RETAINER (3 SP)	31370	■	■	■
MAIN DRIVE GEAR OIL SEAL (CVT)	31375	■	■	■
BREATHER	31381	■	■	■
DRUM SUPPORT (4 SP)	31385	■	■	■
OIL PAN/VALVE COVER	31390	■	■	■
SIDE COVER	31391	■	■	■
SIDE COVER GASKET	31396	■	■	■
SEAL (CVT	31397	■	■	■
ALL INTERNAL SEALS	31398	■	■	■
DRIVE BEARING PINION (CVT)	31409	■	■	■
INPUT SHAFT	31411	■	■	■
INTERMEDIATE SHAFT (4 SP)	31416	■	■	■
FRONT PLANETARY CARRIER	31420	■	■	■
NEEDLE BEARING	31428	■	■	■
INTERNAL GEAR	31431	■	■	■
SECOND NEEDLE RACE (CVT)	31435	■	■	■
ADJUSTER WASHER (CVT)	31438	■	■	■
REAR PLANETARY CARRIER	31440	■	■	■
NEEDLE BEARING (CVT)	31455	■	■	■
SUN GEAR ASSY	31460	■	■	■
ONE WAY CLUTCH ASSY	31473	■	■	■
FORWARD CLUTCH HUB	31475	■	■	■
OUTPUT SHAFT	31480	■	■	■
PARKING GEAR/OIL DISTRIBUTOR	31486	■	■	■
REDUCTON DRIVE GEAR (CVT)	31489	■	■	■
OUTPUT / IDLER GEAR SET / REDUCTION DRIVE GEAR (CVT)	31493	■	■	■
DRIVE PINION SHAFT (CVT)	31495	■	■	■
DIRECT/LOW CLUTCH ASSY	31505	■	■	■
ADJUSTER SNAP RING (CVT)	31506	■	■	■
FRONT CLUTCH ASSY	31510	■	■	■
REVERSE CLUTCH DRUM	31512	■	■	■
FRONT CLUTCH PISTON	31513	■	■	■
REVERSE CLUTCH ASSY	31515	■	■	■
PRESSURE FLANGE	31519	■	■	■
RETURN SPRING ASSY	31521	■	■	■
O-RING TORQUE CONVERTER	31525	■	■	■
OIL PUMP SEAL ASSY	31526	■	■	■
O RING SEAL (CVT)	31527	■	■	■
DRIVE PLATE ASSY	31532	■	■	■
DRIVEN PLATE	31536	■	■	■
REAR/HIGH CLUTCH	31540	■	■	■
HIGH CLUTCH DRUM	31541	■	■	■
REAR CLUTCH DRUM ASSY	31543	■	■	■
HIGH CLUTCH ASSY	31545	■	■	■
HIGH CLUTCH HUB	31550	■	■	■
REAR CLUTCH HUB ASSY	31551	■	■	■
FORWARD CLUTCH ASSY	31570	■	■	■
FORWARD CLUTCH DRUM	31571	■	■	■
O.D. PLANETARY CARRIER-4 SP	31580	■	■	■
OVERRUN CLUTCH HUB	31591	■	■	■
OVERRUN CLUTCH ASSY	31595	■	■	■
BAND SERVO	31615	■	■	■
BRAKE BAND	31630	■	■	■
LOW & REVERSE BRAKE	31645	■	■	■
LOW & REVERSE BRAKE	31650	■	■	■
ACCUMULATOR PISTON	31671	■	■	■
SPEEDOMETER PINION ASSY	31703	■	■	■
CONTROL VALVE ASSY	31705	■	■	■
OIL STRAINER	31728	■	■	■
COVER ASSY - OIL FILTER	31729	■		
DRAIN PLUG (CVT)	31744	■	■	■
ENGINE BRAKE BODY ASSY (CVT)	31800	■	■	■
GOVERNOR	31860	■	■	■
GOVERNOR SEAL RING CAP	31877	■	■	■
SPEEDOMETER CASE & GEAR	31883	■	■	■
RATIO SENSOR ASSY (CVT)	31907	■	■	■
RATIO SENSOR ROD ASSY (CVT)	31911	■	■	■
RANGE SELECT LEVER	31913	■		
SHIFT LEVER ASSY (CVT)	31914	■		
GASKET & O-RING	31916	■	■	■
SHIFT FORK SHAFT ASSY (CVT ONLY)	31921	■	■	■
MANUAL PLATE / SHIFT CAM ASSY (CVT)	31924	■	■	■
SENSOR ASSY - SECONDARY SPEED	31930	■	■	■
VACUUM DIAPHRAGM	31931	■		
OUPUT SPEED SENSOR	31932	■	■	■
O-RING SEAL	31933	■	■	■
REVOLUTION SENSOR	31935	■	■	■
TURBINE REVOLUTION SENSOR	31936	■	■	■
TURBINE REVOLUTION SENSOR	31937	■	■	■
SENSOR ASSY-PRIMARY SPEED	31938	■	■	■
CONTROL SOLENOID ASSY	31939	■	■	■
CONTROL SOLENOID ASSY	31940	■	■	■
DOWNSHIFT SOLENOID	31941	■	■	■
LOCK-UP SOLENOID	31942	■	■	■
SHIFT SOLENOID A	31943	■	■	■
SHIFT SOLENOID B	31944	■	■	■
O.D. CANCEL SOLENOID	31945	■	■	■
LINE PRESSURE SOLENOID	31946	■	■	■
OVERRUN, CLUTCH SOLENOID	31947	■	■	■
TRANSMISSION WIRE	31949	■	■	
SENSOR ASSY-TRANSFER TEMP	31954	■	■	■
LOW TEMP SENSOR	31958	■	■	■
SENSOR ASSY THERMO	31959	■	■	
SENSOR ASSY-TEMPERATURE	31961	■	■	
PARKING ROD ASSY	31970	■	■	■
SHIFT CONNECTION ROD (CVT)	31978	■	■	■
PARKING PAWL	31986	■	■	■
PARKING PAWL (CVT)	31991	■	■	■
4WD SWITCH ASSY	32001	■	■	
WAIT DETECTION SWITCH	32002	■	■	
ATP SWITCH	32003	■	■	■
NEUTRAL SWITCH	32004	■	■	■
REVERSE LAMP SWITCH	32005	■	■	
TOP/NEUTRAL SWITCH	32006	■	■	■
INDICATOR SWITCH-4WD	32007	■	■	
NEUTRAL SWITCH	32008	■	■	■
DIFF LOCK ACTUATOR SWITCH	32009	■	■	■
OIL CATCH TANK BREATHER	32011	■	■	
TRANSAXLE ASSY-MANUAL	32012	■	■	■
SENSOR ASSY-RANGE	32016	■	■	
SENSOR ASSY-MODE	32018	■	■	
SWITCH BRACKET	32020	■	■	
SENSOR ASSY - POSITION	32050	■	■	■
MAGNET ASSY - POSITION	32055	■	■	■
TRANSMISSION CASE	32100	■	■	■
DRAIN PLUG	32103	■	■	■
DRAIN PLUG	32104	■	■	■
FILLER PLUG	32105	■	■	■
NEUTRAL POSITION SWITCH	32106	■	■	
OIL GUIDE/GUTTER	32107	■	■	■
OIL GUTTER	32108	■	■	■
TRANSMISSION MAGNET	32109	■	■	■
TRANSMISSION FRONT COVER	32110	■	■	■
FRONT COVER GASKET	32112	■	■	■
FRONT COVER/OIL INPUT SEAL	32113	■	■	■
TRANSMISSION CASE COVER	32129	■	■	■
REAR EXTENSION ASSY	32130	■	■	■
BREATHER	32131	■	■	■
REAR EXTENSION OIL GUTTER	32132	■	■	■
REAR EXTENSION BEARING	32133	■	■	■
REAR EXTENSION OIL SEAL	32136	■	■	■
ADAPTER PLATE	32137	■	■	■
BEARING RETAINER	32139	■	■	■
EXTENSION UPPER COVER	32142	■	■	■
EXTENSION UPPER COVER GASKET	32143	■	■	■
BAFFLE PLATE	32150	■	■	■
REVERSE CHECKING ASSY	32180	■	■	■
REDUCER BREATHER HOSE	32182	■		
MAIN DRIVE GEAR	32200	■	■	■
PILOT BEARING	32202	■	■	■
DRIVE GEAR BEARING	32203	■	■	■
SNAP RING	32204	■	■	■
COUNTERSHAFT	32211	■	■	■
COUNTER GEAR ASSY	32212	■	■	■
COUNTER GEAR	32213	■	■	■
3RD MAIN GEAR	32215	■	■	■
4TH MAIN GEAR	32217	■	■	■
4TH MAIN GEAR	32218	■	■	■
COUNTERSHAFT / INPUT SHAFT BEARING	32219	■	■	■
REVERSE COUNTER GEAR	32220	■	■	■
PILOT BEARING SPACER	32221	■	■	■
COUNTER SHAFT RR THRUST WASHER	32225	■	■	■
GEAR, 1ST SPEED	32230	■	■	■
COUNTERSHAFT NUT	32236	■	■	■
MAINSHAFT	32241	■	■	■
MAINSHAFT LOCK NUT	32243	■	■	■
REVERSE MAIN GEAR	32245	■	■	■
REVERSE IDLER THRUST WASHER	32249	■	■	■
GEAR, 2ND SPEED	32250	■	■	■
3RD COUNTER GEAR ASSY	32259	■	■	■
GEAR, 3RD SPEED	32260	■	■	■
3RD GEAR INPUT SHAFT	32261	■	■	■
GEAR BUSHING	32262	■	■	■
4TH COUNTER GEAR ASSY	32263	■	■	■
NEEDLE BEARING	32264	■	■	■
MAIN GEAR (4TH)	32270	■	■	■
4TH GEAR INPUT SHAFT	32271	■	■	■
PILOT BEARING	32272	■	■	■
MAINSHAFT BEARING	32273	■	■	■
COUNTER GEAR BUSHING	32275	■	■	■
COUNTER GEAR NEEDLE BEARING	32276	■	■	■
REVERSE IDLER GEAR ASSY (CVT)	32280	■	■	■
REVERSE IDLER SHAFT	32281	■	■	■
REVERSE IDLER GEAR	32282	■	■	■
REVERSE IDLER BEARING	32283	■	■	■
RETAINING PIN	32293	■	■	■
HUB & SLEEVE SET	32300	■	■	■
INPUT GEAR (5TH)	32310	■	■	■
COUNTER BEARING ASSY	32319	■	■	■
MAIN SHAFT BEARING	32339	■	■	■
MAIN GEAR (5TH)	32340	■	■	■
6TH MAIN GEAR ASSY	32341	■	■	■
2ND MAIN SHAFT GEAR ASSY	32350	■	■	■
C RING HOLDER	32351	■	■	■
SYNCHRONIZER HUB	32600	■	■	■
SYNCHRONIZER / COUPLING SLEEVE / HUB	32601	■	■	■
SPREAD RING	32602	■	■	■
SPREAD RING	32603	■	■	■
BAULK RING	32604	■	■	■
BAULK RING	32605	■	■	■
COUPLING SLEEVE	32606	■	■	■
INSERT	32609	■	■	■
REVERSE BAULK RING	32617	■	■	■
SYNCHRONIZER ASSY	32620	■	■	■
BAULK RING (1ST)	32680	■	■	■
BAULK RING (2ND)	32681	■	■	■
BAULK RING (3RD)	32682	■	■	■
BAULK RING (4TH)	32683	■	■	■
BAULK RING (5TH)	32684	■	■	■
SYNCHRO RING SET (5TH)	32689	■	■	■
SPEEDMASTER DRIVE GEAR	32701	■	■	■
SPEEDO PINION ASSY	32702	■	■	■
SPEEDOMETER PINION	32703	■	■	■
SPEEDOMETER SLEEVE ASSY	32707	■	■	■
SPEEDOMETER PINION OIL SEAL	32709	■	■	■
CHECK BALL & SPRING	32721	■	■	■
SHIFT CONTROL ASSY	32800	■	■	■
FORK ROD	32801	■	■	■
FORK SHAFT BUSHING	32803	■	■	■
SHIFT FORK	32805	■	■	■
SHIFT FORK	32806	■	■	■
FORK ROD	32809	■	■	■
RING STOPPER	32812	■	■	■
ROD BRACKET	32813	■	■	■
INTERLOCK PIN	32815	■	■	■
INTERLOCK PLUNGER	32817	■	■	■
SHIFT FORK ASSY (CVT)	32819	■	■	■
SWITCH PLUNGER	32827	■	■	■
CHECK BALL	32828	■	■	■
CHECK BALL & SPRING	32829	■	■	■
CHECK BALL & SPRING	32833	■	■	■
CHECK BALL PLUG	32834	■	■	■
CONTROL LEVER ASSY	32840	■	■	■
CONTROL LEVER	32841	■		
O-RING	32845	■	■	■
LOW/HIGH CONTROL LEVER	32847	■	■	■
PLUNGER	32851	■	■	■
SELECT CHECK SPRING	32852	■	■	■
RETURN SPRING PLUG	32854	■	■	■
RETURN SPRING	32855	■	■	■
CONTROL ROD SHAFT OIL SEAL	32857	■	■	■
OIL CONTROL SEAL	32858	■	■	■
CONTROL ROD BOOT	32859	■	■	■
CONTROL LEVER SOCKET (RWD)	32861	■		
CONTROL LEVER BOOT (RWD)	32862	■		
SHIFT KNOB	32865	■		
CONTROL LEVER HOUSING ASSY	32868	■	■	■
CONTROL ROD BRACKET	32881	■	■	■
SHIFTER CAP	32886	■	■	■
STRIKING ROD ASSY	32887	■	■	■
STRIKING ROD	32890	■	■	■
STRIKING ROD	32892	■	■	■
STRIKING LEVER	32895	■	■	■
STRIKING LEVER	32896	■	■	■
SLIDE BALL BEARING	32898	■	■	■
STRIKING ROD PIN	32917	■	■	■
TRANSFER ASSY	33000	■	■	■
HOSE-BREATHER	33082	■		
TRANSFER CONTROL UNIT	33084	■	■	■
TRANSFER CASE	33100	■	■	■
TRANSFER FRONT CASE	33102	■	■	■
TRANSFER REAR CASE	33103	■	■	■
TRANSFER ASSY REAR CASE	33104	■	■	■
TRANSFER CENTER CASE	33105	■	■	■
TRANSFER ASSY FRONT CASE	33107	■	■	■
FRONT CASE OIL SEAL	33112	■	■	■
MAIN GEAR	33113	■	■	■
DRIVESHAFT OIL SEAL	33114	■	■	■
RING GEAR	33115	■	■	■
BALL BEARING (MAIN GEAR)	33116	■	■	■
TRANSFER CASE FRONT COVER	33117	■	■	■
END COVER	33119	■	■	■
COUNTERSHAFT	33120	■	■	■
COUNTER GEAR	33121	■	■	■
NEEDLE BEARING	33122	■	■	■
HYPOID GEAR	33123	■	■	■
COUNTER GEAR BEARING	33124	■	■	■
LOW & HIGH COUPLING SLEEVE	33130	■	■	■
TRANSFER MAIN SHAFT	33131	■	■	■
LOW SPEED GEAR	33132	■	■	■
FRONT DRIVE SPROCKET	33134	■	■	■
DRIVE SHAFT BEARING	33135	■	■	■
THRUST BEARING	33136	■	■	■
PILOT BEARING	33137	■	■	■
OUTPUT BEARING	33139	■	■	■
REAR CASE OIL SEAL	33142	■	■	■
PINION SLEEVE	33143	■	■	■
COUPLING SLEEVE HUB	33144	■	■	■
REAR CASE OIL SEAL	33145	■	■	■
FRONT COVER OIL SEAL	33147	■	■	■
ADAPTER CASE OIL SEAL	33148	■	■	■
TRANSFER FRONT CASE COVER	33150	■	■	■
FRONT DRIVE SHAFT	33151	■	■	■
NEEDLE BEARING	33152	■	■	■
REAR CLUTCH DRUM ASSY	33153	■	■	■
COUPLING SLEEVE	33154	■	■	■
DRIVE CHAIN	33155	■	■	■
COMPANION FLANGE	33156	■	■	■
HYPOID PINION	33158	■	■	■
DRIVE CHAIN	33159	■	■	■
SHIFT ROD	33161	■	■	■
SHIFT FORK	33162	■	■	■
FRONT SHIFT BRACKET	33164	■	■	■
SHIFT ROD ASSY	33166	■	■	■
SHIFT FORK SPRING	33169	■	■	■
SHIFT SHAFT	33180	■	■	■
SHIFT SHAFT OIL SEAL	33185	■	■	■
TRANSFER CONTROL LEVER	33210	■		
COMPANION FLANGE ASSY	33211	■	■	■
CENTER CASE OIL SEAL	33216	■	■	■
FRONT DRIVE OIL SEAL	33217	■	■	■
TRANSFER SHIFT KNOB	33219	■		
TRANSFER CONTROL ASSY	33251	■	■	
ACTUATOR ASSY-MOTOR	33252	■	■	■
ACTUATOR-SHIFT,TRANSMISSION	33253	■	■	■
SENSOR ASSY-ROTARY	33259	■	■	
DRAIN PLUG	33312	■	■	■
CROSS SHAFT	33822	■	■	■
TRANSFER PROTECTOR	33940	■		
M/T SHIFTER-	34101	■		
CONTROL ROD	34103	■		
RETAINING PIN	34113	■	■	■
ACTUATOR ASSY	34310	■		
CONTROL ROD LOWER BRACKET	34400	■		
SHIFT ROD TRUNNION	34410	■		
CONTROL CABLE ASSY	34413	■		
CROSS SHAFT LEVER	34430	■		
LOWER CONTROL ROD	34441	■		
SUB TRANSMISSION ROD	34451	■		
SUB TRANSMISSION ROD	34452	■		
DUST COVER HOLDER	34504	■		
CROSS SHAFT LEVER	34507	■		
CROSS SHAFT ASSY	34520	■		
SUPPORT ROD (FWD)	34559	■		
SUPPORT ROD BRACKET	34560	■		
SUPPORT ROD DAMPER	34582	■		
CROSS OVER SHAFT	34692	■		
ELECTRIC SHIFT SELECTOR	34902	■	■	■
A/T CONTROL DEVICE	34903	■		
KEY INTERLOCK CABLE ASSY	34908	■		
INDICATOR-SELECT	34910	■		
COMPRESSION ROD	34912	■		
LEVER SHAFT	34915	■		
POSITION PLATE PIN	34917	■		
CONTROL LEVER	34920	■		
RETURN SPRING	34926	■		
SELECTOR ROD/CONTROL CABLE	34935	■		
A/T CABLE	34936	■		
INTERLOCK SOLENOID	34970	■	■	
PARK POSITION SWITCH-A/T VEHICLES	34980	■	■	
MASS DAMPER	34998	■		
FINAL GEAR	38101	■	■	■
FINAL GEAR	38106	■	■	■
PINION BEARING	38121	■	■	■
COMPANION FLANGE	38212	■	■	■
FRNT DIFF SIDE SHAFT	38231	■	■	■
FRONT AXLE TUBE	38242	■	■	■
TRANSFER BREATHER	38323	■		
SEAL-O RING, SIDE RET	38343	■	■	■
BREATHER&HOSE-COUPLING,ELECTRIC	38359	■	■	■
DIFFERENTIAL CASE	38410	■	■	■
SIDE GEAR	38413	■	■	■
SIDE GEAR	38414	■	■	■
PINION MATE	38415	■	■	■
PINION MATE	38416	■	■	■
PINION MATE SHAFT	38417	■	■	■
PINION MATE SHAFT	38418	■	■	■
COUNTERSHAFT BEARING	38441	■	■	■
SIDE BEARING	38444	■	■	■
SIDE BEARING	38446	■	■	■
SHIM-ADJ, SIDE BRG	38453	■	■	■
4WD FINAL DRIVE ASSY	38500	■	■	■
DIFFERENTIAL CASE	38720	■	■	■
PINION MATE SHAFT	38727	■	■	■
VISCOUS COUPLING	38760	■	■	■
4WD REAR COVER	40513	■	■	■
TORQUE SPLIT CONTROL UNIT	41650	■	■	■
A/T CONTROL INDICATOR	48475	■		
TRANS DIFFERENTIAL CASE	PHK49	■	■	■
DIFFERENTIAL CASE ASSY (CVT)	TJD65	■	■	■

NISSAN Security+Plus®

Enhanced Protection with Gold Preferred

With **Gold Preferred**, virtually all major systems of your Nissan are covered, including Advanced Driver Assistance Systems (ADAS) such as intelligent cruise control system, camera systems, parking sonars, blind spot monitoring system, and lane change warning system.

In fact, the **Gold Preferred** plan offers exclusionary coverage[1], the highest level of coverage that a vehicle qualifies for once it is outside the manufacturer's warranty.

Silver Preferred and **Powertrain Preferred** plans cover the repair cost for mechanical breakdown of the parts listed on the Security+Plus Vehicle Service Contract (VSC)[1] after your vehicle's warranty expires.

To review all of your plan options,

TALK TO OUR EXPERTS

Ask your local Nissan Dealer or call 866-224-9827. You can also visit nissan-securityplus.com or use this QR code to schedule a call with a Security+Plus specialist.

Disclaimer:
THIS BROCHURE, WHICH IS LIMITED BY SIZE, IS NOT A CONTRACT. READ A SAMPLE SECURITY+PLUS CONTRACT AT YOUR DEALER, AND READ YOUR ACTUAL SERVICE CONTRACT BECAUSE ITS TERMS, CONDITIONS, EXCLUSIONS, AND LIMITATIONS CONTROL.

[1] Please refer to your service contract or ask your Dealer for a sample contract for details. The Security+Plus Fleet VSC plan has some details that differ from those in this brochure.

Notice:
In compliance with federal laws, the contents of this brochure should be interpreted and understood within the meaning of a "Service Contract" as defined in Federal Law. (See 15 USCS Sec. 2301 (8).)

In Florida, Security+Plus is backed by Nissan Extended Services North America, Inc., P.O. Box 685004, Franklin, TN 37068-5004, License #60128. The new or remanufactured Genuine Nissan or Nissan-approved replacement part may differ from the original part.

Nissan, the Nissan Logo, and Security+Plus are registered trademarks of Nissan North America, Inc.
©2023 Nissan Extended Services North America, Inc. All rights reserved.

owners.nissanusa.com/Security+Plus 800-NISSAN-1

SECCOMPONENT
1023